



Operating Instructions



COVERED BY ONE OR MORE PATENTS

WWW.XTENDANDCLIMB.COM

Operating Instructions



Work platform handling instructions

1. Place the platform on a flat surface with the legs facing up.
2. Grip the opening and closing levers (D) at the side of the platform. This will release the lock of the hinges (F) and allow you to unfold the leg. Make sure that the hinge (F) is locked.
3. Repeat #2 listed above for the opposite side.
4. Raise the work platform slowly, by grabbing the handle (G) and place the feet (J) on a level surface.
5. When closing, lay the platform upside down on a flat surface.
6. With the handle (G) facing towards you, **close the right leg first.** Follow with the left leg.



How to adjust the leg extensions

1. Lift the platform onto one side and rest the bottom rung (B) against your body.
2. Push the silver locking button (I) located behind the red lever. This will release the locking mechanism.
3. To adjust the height of the leg, push the Red Adjustable Locking Mechanism (C) towards the center of the rung (B) to release the leg to your desired height.
4. Push the Red Adjustable Locking Mechanism (C), marked with the number 1, to securely lock the leg before using.
5. Follow the process above for adjusting the other legs.

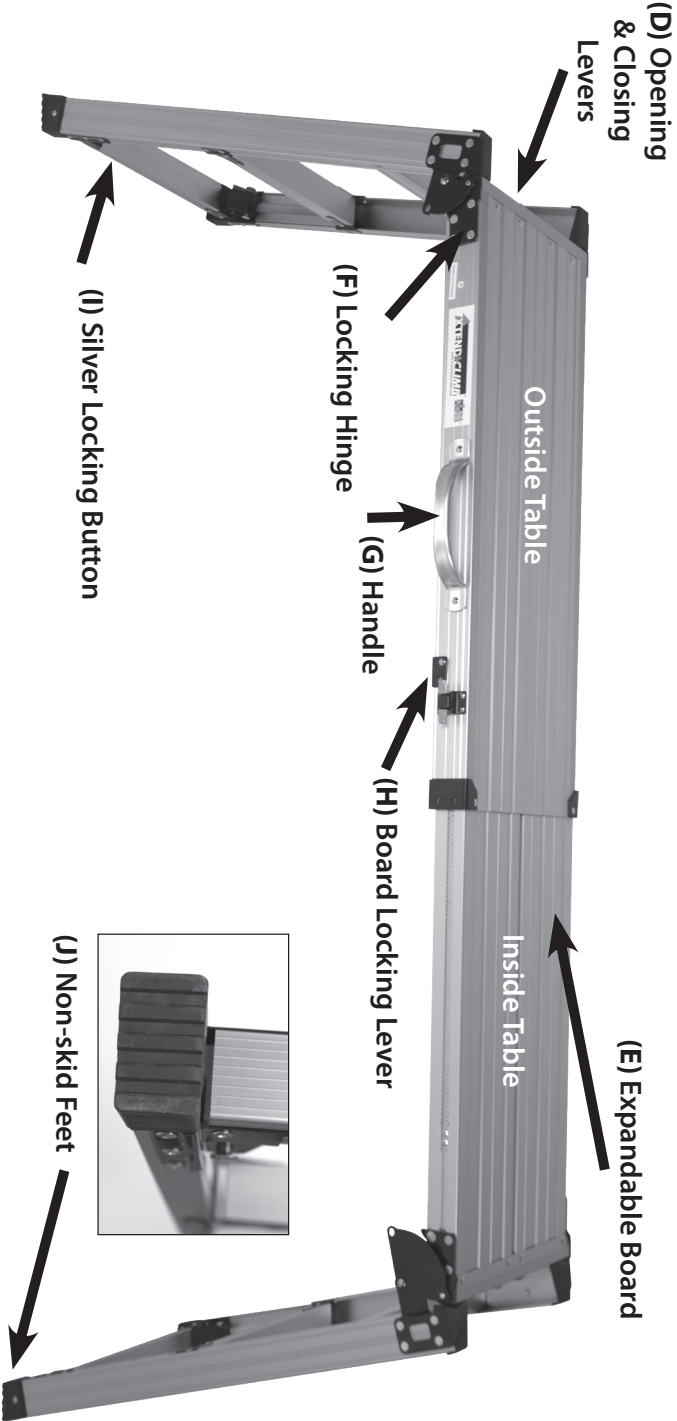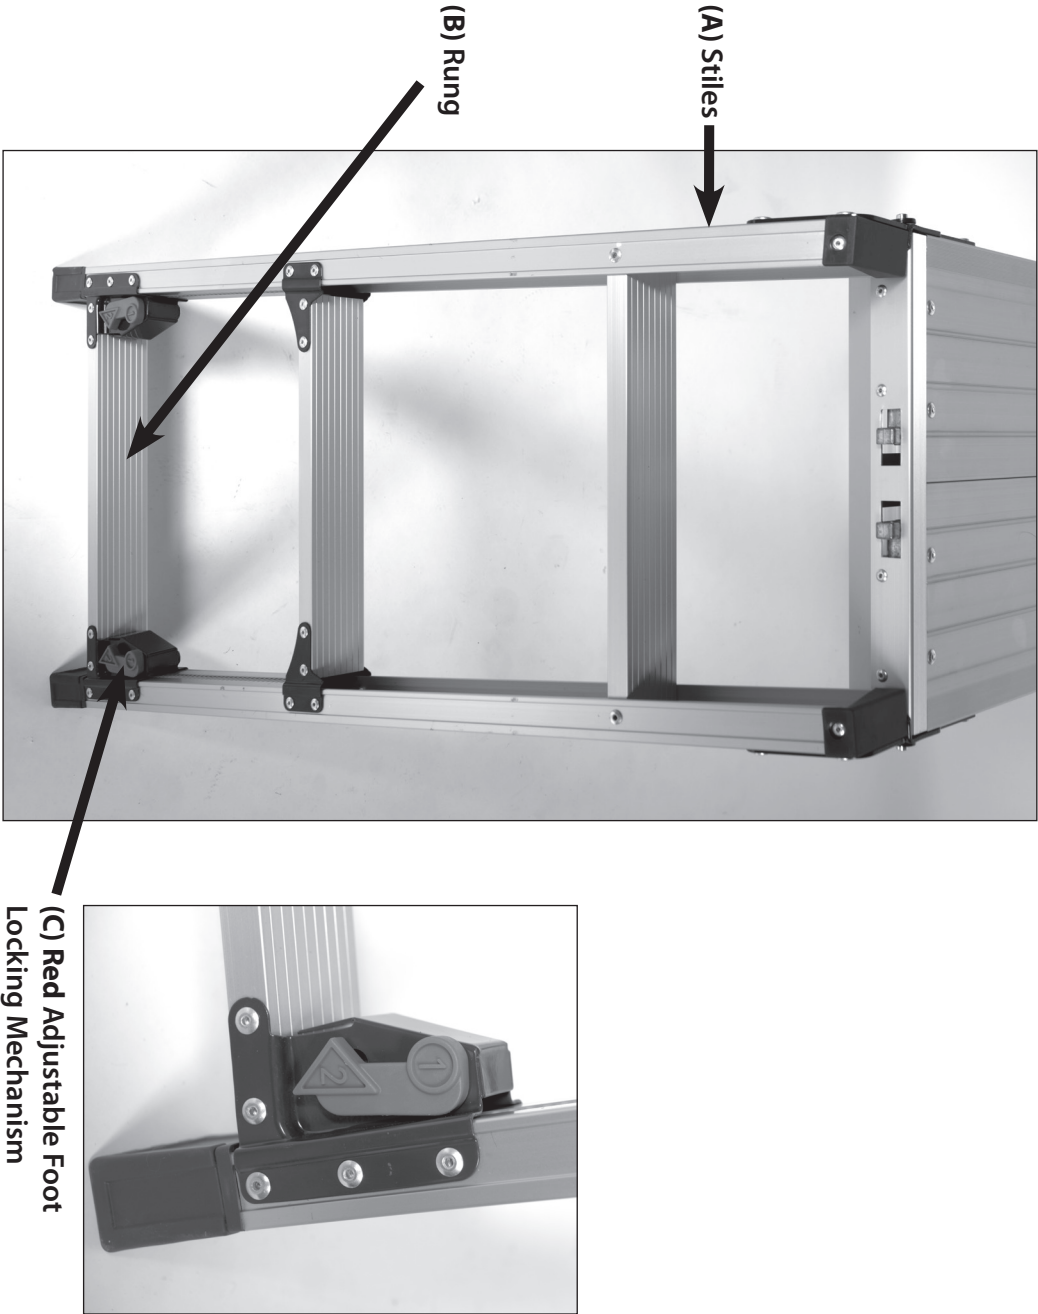

How to adjust the length of the expandable board

1. Use your left hand to pull the Board Locking Lever (H) outwards.
2. Lift the platform slight, off of the ground. This will allow you to slide the platform to the right and adjust the Expandable Board (E) to your desired length.
3. After adjusting the the work platform to your desired length, you will hear an audible click when the board locking lever (H) is security in place. To ensure the expandable board (E) is locked into place, push the board locking lever (H) where the lock icon is engraved on the front.
4. To retract the platform, follow the steps list. above.




MAKE SURE THE LATCHES ARE IN LOCKED POSTION AFTER ADJUSTING THE LENGTH OF THE PLATFORM BEFORE USE.

Proper Use & Care

Please read and follow the directions listed below before using:

- Inspect the product upon receipt and before each use.
- Check platform for missing or damaged parts
- Do not use or modify the product for anything other than a work platform.
- Use this product within the maximum working load capacity as stated on the label.
- When transporting, do not drag, throw or handle roughly.
- Make sure that the legs are firmly in place before storing in a safe and dry place.
- Avoid power lines when installing or carrying.
- Place on a firm level, non-slippery surface.
- Do not use the platform during rain or wind
- Check that all metal clasps are firmly locked before using.
- Do not use foreign materials to alter the size of the platform
- Do not have more than two people standing on the platform at the same time.
- Do not put a board between two work platforms and use them as scaffolding.
- Keep platform clean and free of all foreign materials.
- Do not wear clothing that can get stuck in the product.

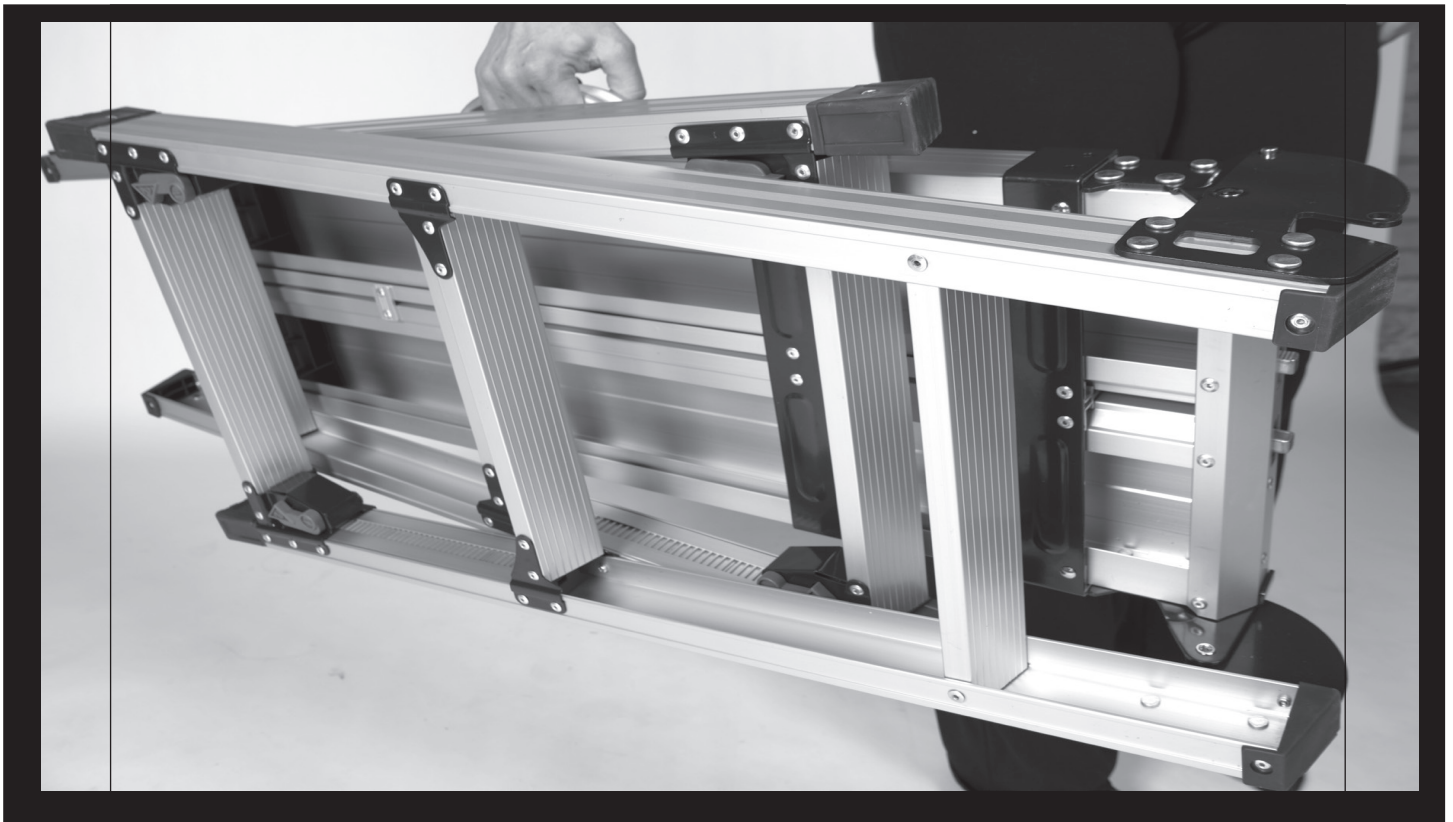

General Maintenance & Storage

1. Wipe off dirt completely with a damp dust cloth.
2. Avoid using cleaners or detergents on the platform as it will cause it to rust.
3. Avoid cement, lime, water and mud as these will hinder the performance of the hinges, extendable legs and platform.
4. If the platform is wet, wipe visible water with a cloth and store in a location where it can dry completely.
5. When not in use, store the platform in a dry place.



COVERED BY ONE OR MORE PATENTS

WWW.XTENDANDCLIMB.COM